

*Настройка сканера Zebex Z3080 для АМС-100К*



Start of Configuration



RESET

---

INTERFACE MODE



RS-232C

HANDSHAKING PROTOCOL



RTS/CTS

PARITY




None

MESSAGE TERMINATOR (FOR RS-232C TYPE ONLY)



CR

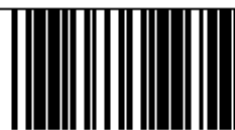

End of Configuration